
PIN:A1869 - blower and the property of the pr

Application:

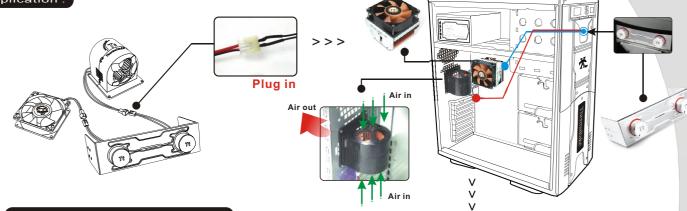

Smart Case Fan II (3 functions):



Function 1

Full speed 4800 rpm : Leave the jumper on.



Function 2

Temp. auto control 1300rpm at 20°C ~ 4800rpm at 55°C: Remove the jumper. Attach the temperature sensor to anywhere on the computer with the thermal adhesive.



Function 3

Adjustable manual fan speed control from 1300 rpm to 4800 rpm : Remove the jumper. Plug in thefan speed control panel as shown.

Recommended application:

- 80x80x70mm Blower for Case fan
- 80x80x25mm Axial flow fan for CPU cooling fan
- These two fans are exchangeable by supplied screws.
- Note: There are 3 packages of screws included

A: For Axial fan

B : For Blower fan

C : For fan speed control panel

