


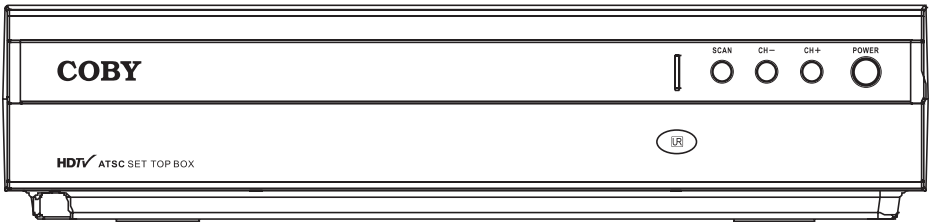

ATSC High-Definition (HD) Set Top Box



Instruction Manual

Please read this manual carefully before operation

PRECAUTIONS

	CAUTION WARNING: SHOCK HAZARD. DO NOT OPEN. AVIS: RISQUE DE CHOC ELECTRIQUE. NE PAS OUVRIR	
CAUTION: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK) OF THE UNIT. REFER SERVICING ONLY TO QUALIFIED SERVICE PERSONNEL.		

For Customer Use:

Enter below the serial number that is located on the unit. Retain this information for future reference.

Model No. _____ DTV-140 _____

Serial No. _____



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operation and servicing instructions in the literature accompanying the appliance.

WARNING:

To prevent fire or shock hazard, do not expose this device to rain or moisture. Dangerous high voltage is present inside the enclosure. Do not open the cabinet.

CAUTION:

Any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

CAUTION:

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer to manual for servicing instructions.

CAUTION:

Insert the power plug into the wall outlet with AC90-260V, 50/60 HZ. If you have difficulty inserting the plug, turn it over and reinsert it. If the unit will not be used for a long time, disconnect the plug from the outlet.

NOTICE:

Unauthorized copying, broadcasting, public performance, and lending of disks are prohibited. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.



For recycling or disposal information about this product, please contact your local authorities or the Electronics Industries Alliance:
www.eiae.org.


IMPORTANT SAFETY INSTRUCTIONS

- 1. Read Instructions:** All the safety and operating instructions should be read before the product is operated.
- 2. Retain Instructions:** The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings:** All warnings on the product and in the operating instructions should be adhered to.
- 4. Follow Instructions:** All operating and usage instructions should be followed.
- 5. Cleaning:** For your safety, always unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a dry or slightly damp (not wet) cloth for cleaning or dusting.
- 6. Attachments:** Use only attachments recommended by the manufacturer. Use of other attachments may be hazardous.
- 7. Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. Use only with carts, stands, tripods, brackets, or tables recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
- 8.** A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
- 9. Water and Moisture:** Water is a natural conductor of electricity. To avoid the possibility of shock or severe injury, do not use this product in or near any sources of water (e.g., a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, a swimming pool and the like).
- 10. Object and Liquid Entry:** Never push objects of any kind into this product, through openings or otherwise; this may result in objects touching dangerous voltage points or short-out parts that could result in a personal or property damage or injury, including fire or electric shock. Never spill liquid of any kind on the product.
- 11. Ventilation:** Any electrically powered consumer electronic product generates heat while in use, thereby requiring proper ventilation. To ensure reliable operation of the product and to protect it from overheating, do not operate the product on a bed, sofa, rug, or other similar soft surface, and never block any ventilation slots or openings provided for the unit. This product should not be operated in any enclosed area such as a cabinet, bookcase or rack unless proper ventilation is provided for the unit.
- 12. Heat:** The product should be situated away from any heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
- 13. Power Sources:** This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.



IMPORTANT SAFETY INSTRUCTIONS

14. **Grounding or Polarization:** This product may be equipped with a polarized alternating-current line plug that has one blade wider than the other. This plug will only fit into the power outlet in one direction. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the direction of the plug. If the plug should still fail to fit, your outlet may be obsolete; contact a licensed electrician to replace it. Never attempt to defeat the safety purpose of the polarized plug.
15. **Power-Cord Protection:** Care must be taken to ensure that power supply cords are routed so as to avoid being damaged, such as by being walked on or pinched by items placed upon or against them. You should pay particular attention to cords at plugs, convenience receptacles, and at the point where they exit from the product.
16. **Protective Attachment Plug:** The product may be equipped with an attachment plug with overload protection. This is a safety feature. See the operating instructions for replacement or directions to reset the protective device. If replacement of the plug is required, please consult an authorized service technician, and make sure s/he has used a replacement plug that has the same overload protection as the original plug as specified by the manufacturer.
17. **Outdoor Antenna Grounding:** If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANS/NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode (see figure).

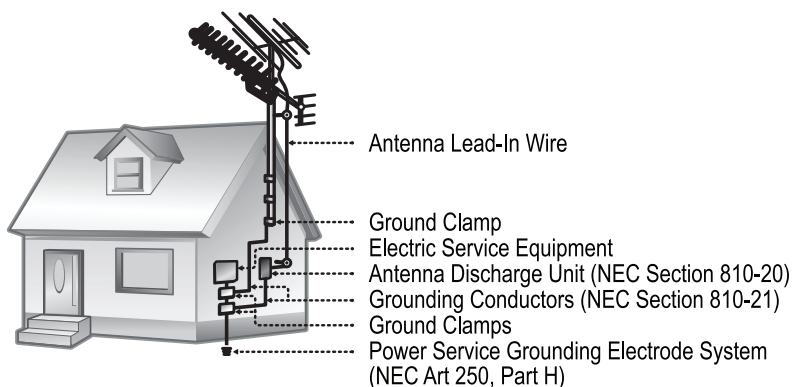

18. **Lightning:** Lightning can cause power surges, which may damage or destroy your product. For added protection, unplug it from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. **Power Lines:** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them might be fatal.

IMPORTANT SAFETY INSTRUCTIONS



- 19. Overloading:** Always operate any electrical device in accordance with applicable electrical codes. Never overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of personal or property damage or injury, including fire or electric shock.
- 20. Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards, including the risk of injury or damage to persons or property. Your warranty will also be voided. Refer all servicing to qualified service personnel.
- 21. Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel if: a) the power-supply or plug is damaged in any way; b) liquid has been spilled or if objects have fallen or been introduced into the product; c) the product has been exposed to rain, water or other sources of moisture; d) the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as improper adjustment of other controls may result in damage and/or require extensive work by a qualified service technician to restore the product to its normal operation; e) the product has been dropped or damaged in any way; f) the product exhibits a distinct change in performance indicative of a need for service.
- 22. Replacement Parts:** When replacement parts are required, be sure that your service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in injury to property or persons including the risk of fire, electric shock, or other hazards, and your warranty will be voided.
- 23. Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform appropriate safety checks to ensure that the product is in proper operating condition.
- 24. Wall or Ceiling Mounting:** the product should only be mounted to a wall or ceiling only as recommended in this Manual.

TABLE OF CONTENTS

PRECAUTIONS	2
IMPORTANT SAFETY INSTRUCTIONS	3
TABLE OF CONTENTS	6
PACKAGE CONTENTS	7
FEATURES	8
CONTROLS AT A GLANCE	9
Front View	9
Rear View.....	10
Remote Control.....	11
CONNECTIONS	13
AC Power	13
Antenna Input	13
Audio/Video Output Connections.....	14
Composite Video or S-Video	14
Component Video.....	15
Connecting Digital Audio to a Digital Receiver System	16
USING THE DTV-140	18
Getting Started	18
Basic Operations.....	18
Changing Channels	18
Adjusting the Volume	19
DTV-140 Options	19
SETUP MENU	21
Working with the Setup Menu.....	21
Channel Settings.....	21
Caption Settings	23
System Settings.....	23
Lock Settings.....	24
SPECIFICATIONS	26
TROUBLESHOOTING	27

PACKAGE CONTENTS

Please make sure the following items are included in the product packaging. If any items are missing, contact your local dealer.

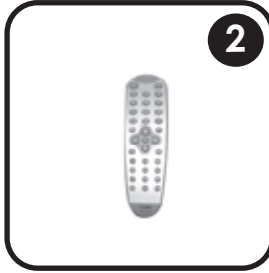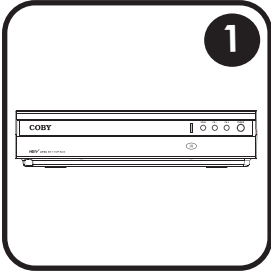


1. DTV-140
2. Remote Control

FEATURES

- Receives Free Over-the-Air (OTA) Digital Television Signals
- Compatible with all 18 ATSC Signal Formats
- Outputs OTA HDTV Signals for use with High-Definition TVs (720p/1080i)
- Downconverts OTA HDTV Signals for use with Standard- and Enhanced-Definition TVs (480i/480p)
- On-Screen Program Guide

CONTROLS AT A GLANCE


Front View

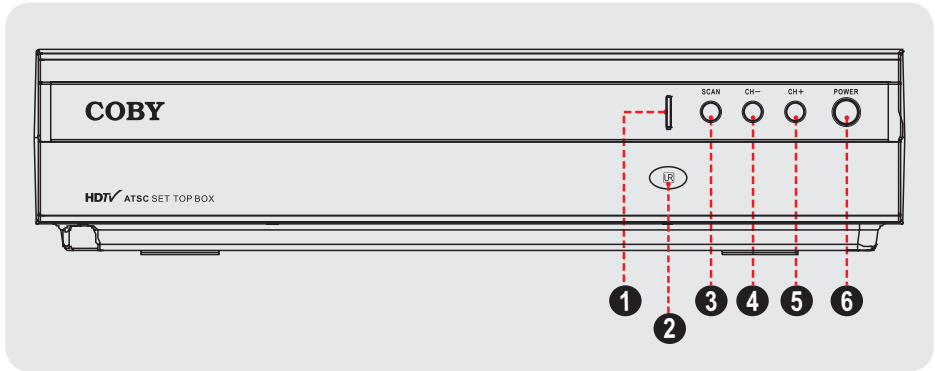

1. Power Indicator
2. Remote Control Sensor
3. Scan
4. Channel -
5. Channel +
6. Power

CONTROLS AT A GLANCE



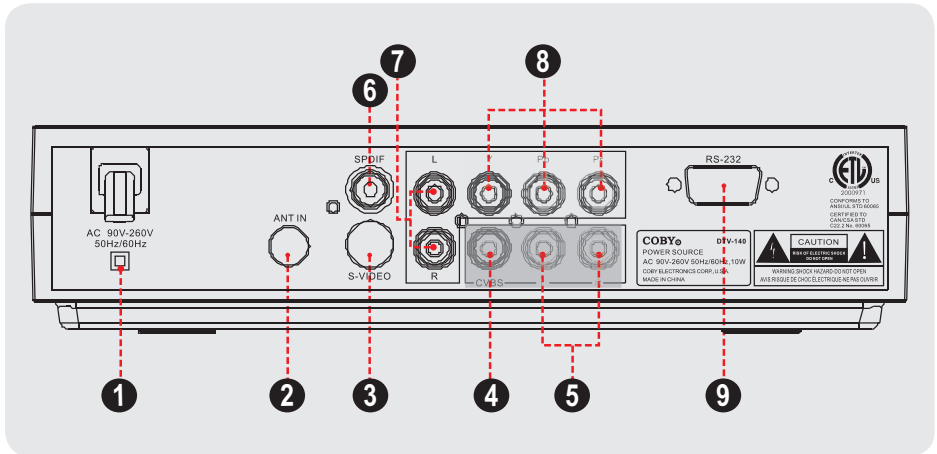



















Rear View




1. AC Power Cord
2. Antenna In
3. S-Video Out
4. Composite Video Out
5. Stereo Audio Out (Composite Video)
6. SPDIF Digital Audio Out
7. Stereo Audio Out (Component Video)
8. Component Video Out
9. Serial Port (Service Only)

CONTROLS AT A GLANCE

Remote Control

- 1. Power 
- 2. Source 
- 3. Numeric Keypad
- 4. Recall 
- 5. Channel Input 
- 6. Menu 
- 7. Exit 
- 8. **Navigation Keypad**
 - Up / Channel Up 
 - Down / Channel Down 
 - Right / Volume Up 
 - Left / Volume Down 
 - Enter 
- 9. Closed Caption 
- 10. F1 
- 11. F2 
- 12. F3 
- 13. F4 
- 14. Information 
- 15. Mute 
- 16. Sleep 
- 17. Program Guide 
- 18. Favorites 
- 19. 480i 

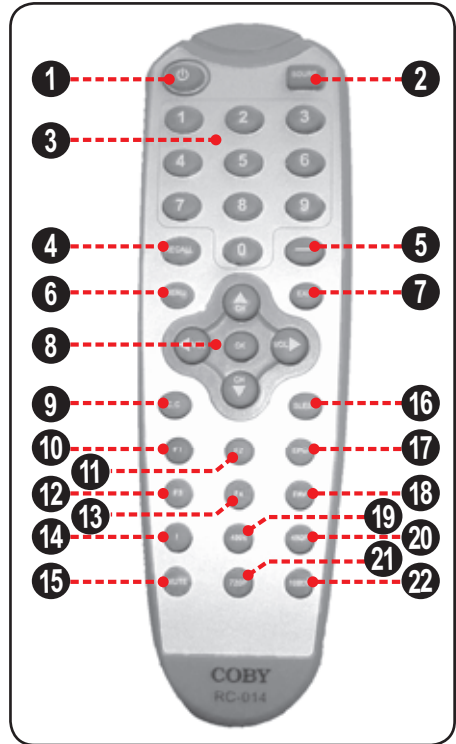


- 20. 480p 
- 21. 720p 
- 22. 1080i 

CONTROLS AT A GLANCE

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared remote sensor during operation. The sensor may not be able to receive signals properly if the sensor is covered, if there is a large object between the remote control and the sensor, or if it is exposed to direct sunlight or a strong artificial light (e.g., fluorescent or strobe lights). In this case, change the direction of the light or reposition the unit to avoid direct lighting.

- To use the remote, point it at the remote sensor of the player. Operate the remote within 15 feet of the sensor and at an angle of ± 60 degrees.
- To install batteries in the remote control, refer to the diagram. Remove the battery compartment cover located on the rear of the remote control. Insert batteries, making sure to match their polarities (+/-) to the markings on the inside of the compartment. Replace the cover.
- Batteries in the remote will last for approximately 1 year. Replace the batteries if the remote control does not work. Do not mix old with new batteries, or different types of batteries.
- Remove the batteries from the remote if it will not be used for a long period of time.

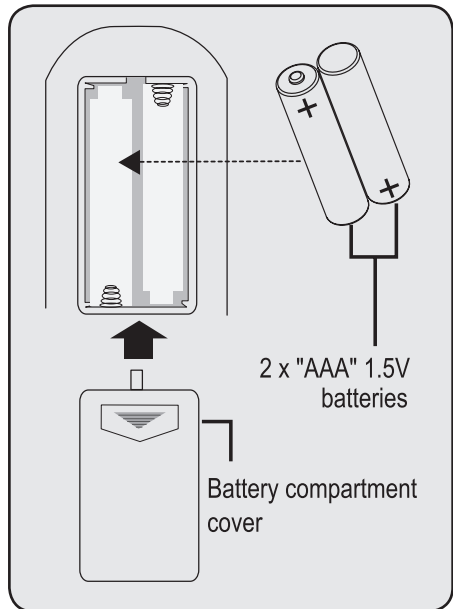

The batteries used in the remote control may present a fire or chemical burn if mistreated. Do not recharge, disassemble, incinerate, or heat the battery (~212°F).

Keep batteries away from children.

CONNECTIONS

AC Power

Plug the AC power cord into an AC 90-260V 50/60 Hz wall outlet, only. If you have difficulty inserting the plug, turn it over and reinsert it.



Do not connect the power plug to a power outlet other than that which is indicated here and on the label as this may result in the risk of fire or electric shock.

Do not handle the power plug with wet hands. Doing so may cause electric shock.


Complete all system connections before connecting the power.

If the player will not be in use for a long period of time, turn the player off, unplug the player, and remove any batteries, as applicable.

When disconnecting the AC power cord (mains lead), grasp the plug itself and not the cord.

Antenna Input

Connect an antenna to the DTV-140 Antenna In jack to receive free, over-the-air digital TV broadcasts.

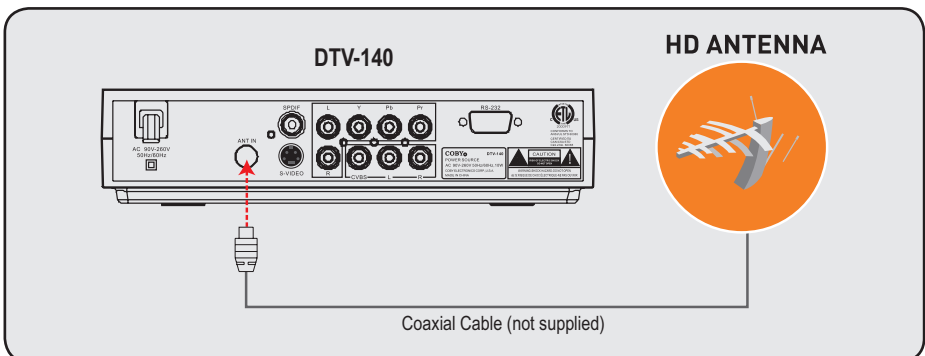

The type of antenna used should be based upon your geographic location, and should be aimed towards your local DTV broadcast stations for best results. Please visit the website www.antennaweb.org for more information about antenna types and station locations.

CONNECTIONS


Audio/Video Output Connections

There are various connection options depending on your TV or other equipment; please refer to the documentation supplied by the manufacturer of your TV or stereo system for more connection information as necessary.

Composite Video or S-Video

The DTV-140 can output video signals up to 480p over Composite Video or S-Video. If your television has Composite Video or S-Video input jacks:

1. Make the video connection. Choose only **one** of the following video connection types:
 - Composite Video: Using a Composite Video AV patch cable, connect the unit's Composite Video Out jack to the Video In jack (yellow) of your TV.
 - S-Video: Using an optional S-Video cable, connect the unit's S-Video Out jack to the S-Video In jack of your TV.
2. Make the audio connection. Using a Composite Video AV patch cable, connect the unit's Stereo Audio Out (Composite Video) jacks to the Audio In jacks (red and white) of your TV.

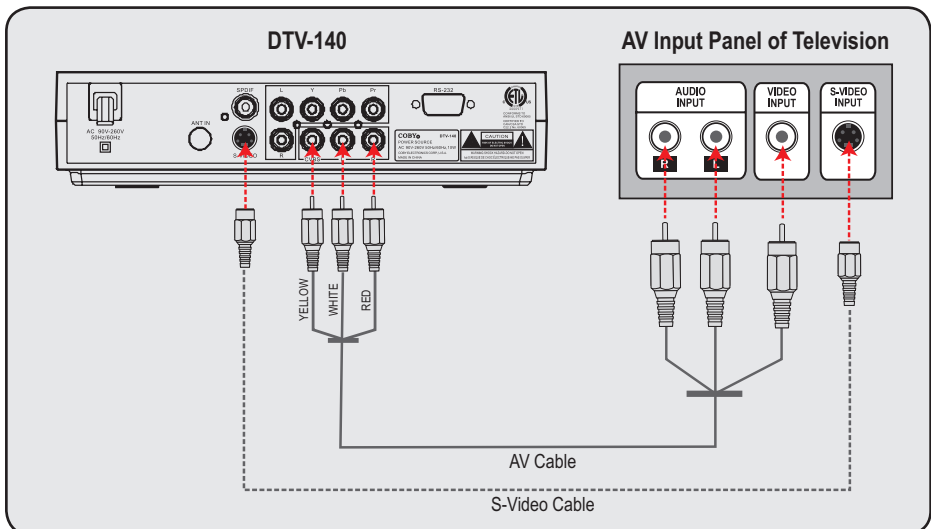


CONNECTIONS

Component Video

The DTV-140 can output video signals up to 1080i over Component Video. If your television has Component Video jacks:

1. Make the video connection.
 - Component Video: Using an optional component video cable, connect the unit's Component Video Out jacks (Y/Pb/Pr) to the Component Video In jacks (Green/Blue/Red) of your TV.
2. Make the audio connection. Using the supplied AV patch cable, connect the unit's Stereo Audio Out (Component Video) jacks to the Audio In jacks (red and white) of your TV. The yellow connector of the AV cable is unused.

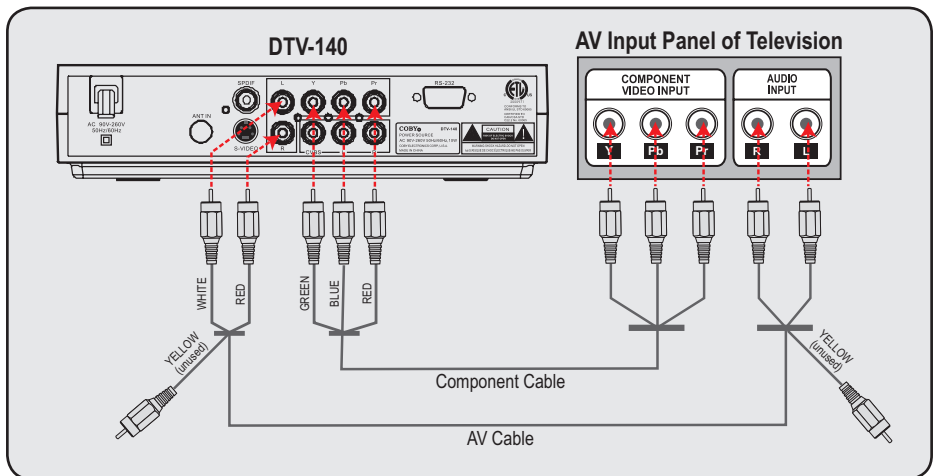


CONNECTIONS

Connecting Digital Audio to a Digital Receiver System

The DTV-140 can output digital 5.1-channel digital audio signals over SPDIF Digital Audio. If you have a digital decoding receiver system with an SPDIF Digital Audio jack:

- Make the audio connection. Using an optional coaxial digital audio cable, connect the unit's SPDIF Digital Audio Out jack to the Digital Audio Input jack of your receiver.

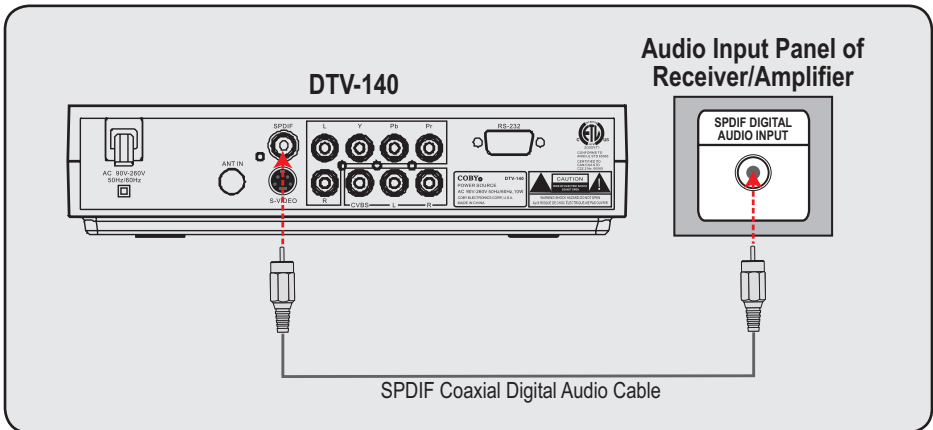

Combine the digital audio connection with any video connection for a complete audio/video experience.


To avoid signal interference, use only one audio connection type at a time.

Digital Audio can be output in two formats: Raw or PCM. For more information, please refer to your receiver's documentation.

USING THE DTV-140

Getting Started

All keypress information refers to the remote control unless the instructions indicate otherwise.

1. Prepare the connections and power supply (see the Connections section of this manual for more information).
2. Press  to turn the unit on.
3. Set your TV to display the video line connection that corresponds to the DTV-140 (e.g., AV1, AV2, S-Video, Component, etc.) The DTV-140 output will be displayed on the TV screen when the proper line has been selected.
4. Press the SCAN button on the front panel to automatically search for and store all channels within broadcast reception range.









It is only necessary to scan for channels upon initial use. See the Setup section of this manual to edit the stored channel list.



Basic Operations

Changing Channels

Press the Channel Up or Channel Down buttons on the front panel of the unit, or use the remote control.





Channel Functions	Remote Key
Change the channel up.	
Change the channel down.	
Initiate direct channel access. After pressing  , use the numeric keypad to enter a channel number to change to.	
Return to a previous channel.	
Access the Favorite Channels list. To learn how to add channels to the list, refer to the <u>Setup Menu</u> section of this manual.	

USING THE DTV-140

Channel Functions	Remote Key
View channel information.	
View the Electronic Program Guide.	








Adjusting the Volume

You can adjust the volume output level of the DTV-140. You may also choose to adjust the volume using the controls of your TV or receiver system.

Volume Functions	Remote Key
Increase the volume output level.	
Decrease the volume output level.	
Disable all audio output. Press  again to restore audio output.	

 DTV-140 Options

Some of the more commonly used options may be changed by using the remote control. For more option settings, refer to the [Setup Menu](#) section of this manual.

Option Functions	Remote Key
Change the DTV signal source: STD, HRC, IRC, or AIR.	
Change the DTV video signal resolution to 480i. Use this resolution with Standard Definition TVs (SDTVs).	
Change the DTV video signal resolution to 480p. Use this resolution with Enhanced Definition TVs (EDTVs).	
Change the DTV video signal resolution to 720p. Use this resolution with High Definition TVs (HDTVs) that are 720p capable.	
Change the DTV video signal resolution to 1080i. Use this resolution with High Definition TVs (HDTVs) that are 1080i capable.	
Change the Closed-Caption options: CC OFF, CC ON, or CC ON-MUTE.	
Change the font style of the Closed-Caption display.	

USING THE DTV-140


Option Functions	Remote Key
Change the font size of the Closed-Caption display.	F2
Change the foreground color of the Closed-Caption display.	F3
Change the background color of the Closed-Caption display.	F4
Set the Sleep Timer (in minutes): 30, 60, 90, 120, or Off. The timer will turn the unit off automatically. When the Sleep Timer is set, press SLEEP again to view the elapsed time.	SLEEP
Access the Setup menu.	MENU
Exit the Setup menu.	EXIT

SETUP MENU

Working with the Setup Menu

Enter Menu mode to adjust the various internal settings of the unit.

1. Press **MENU** to enter Menu mode. The Setup Menu will appear.

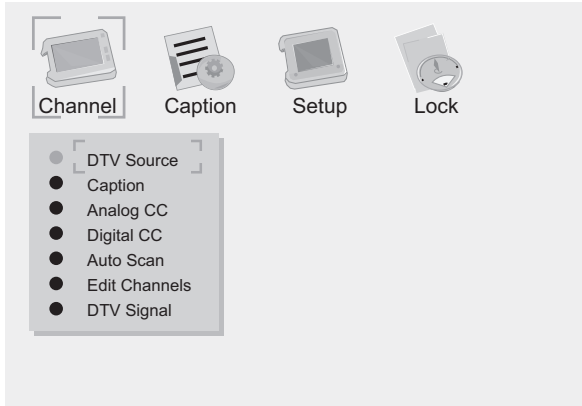

2. Use the Navigation Keypad [**◀VOL** **VOL▶** **▲CH** **CH▼**] to select a desired item:
 - Press **OK** to confirm a selection.
 - Press **EXIT** or **◀VOL** to cancel and return to the previous item.
3. Press **MENU** to exit Menu mode.

Channel Settings

Use the Navigation Keypad to highlight the desired channel setting and press **OK** to confirm.

Channel Setting	Description
DTV Source	Set the DTV signal source: Air, STD, HRC, IRC.
Caption	Turn the closed caption feature on or off.
Analog CC	Set the analog closed caption source: CC, CC1, CC2, CC3, CC4.
Digital CC	Set the digital closed caption source: Service 1 – Service 6.

SETUP MENU

Channel Setting	Description																												
Auto Scan	Automatically search for and store all channels within broadcast reception range. This function may also be enabled by pressing the SCAN button on the front panel of the unit.																												
Edit Channels	<p>Upon selecting "Edit Channels", the following screen will appear:</p> <div data-bbox="402 451 950 858" style="border: 1px solid black; padding: 10px; margin: 10px auto; width: fit-content;"> <p style="text-align: center;">Edit Channels</p> <hr/> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">ChanNo</th> <th style="text-align: left;">Channel Name</th> <th style="text-align: left;">Fav.</th> <th style="text-align: left;">Skip</th> </tr> </thead> <tbody> <tr> <td>00-1</td> <td></td> <td style="text-align: center;">✓</td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> </tr> </tbody> </table> </div> <p>If the Auto Scan function was used previously, the Channel List will be filled with any channels that were found within reception range.</p> <ul style="list-style-type: none"> • To save a Channel No. as "Favorite", use the Navigation Keypad to select FAV and press OK. A check mark will appear to indicate that the channel has been saved as a Favorite channel. • To remove a Channel No., use the Navigation Keypad to select SKIP and press OK. 	ChanNo	Channel Name	Fav.	Skip	00-1		✓																					
ChanNo	Channel Name	Fav.	Skip																										
00-1		✓																											
DTV Signal	<ul style="list-style-type: none"> • View DTV signal information. • Access a specific channel directly. 																												

SETUP MENU

Caption Settings

Use the Navigation Keypad to highlight the desired caption setting and press **OK** to confirm.

Caption Setting	Description
Font Style	Set the Closed Caption font style.
Font Size	Set the Closed Caption font size.
Foreground Color	Set the Closed Caption foreground color.
Background Color	Set the Closed Caption background color.
Foreground Opacity	Set the Closed Caption foreground to be solid or transparent.
Background Opacity	Set the Closed Caption background solid or transparent.

System Settings

Use the Navigation Keypad to highlight the desired system setting and press **OK** to confirm.

System Setting	Description
Picture Size	Set the Aspect ratio of the display: Auto, 16:9 (widescreen).
Language	Set the menu display language: English, Spanish, French.
Time Zone	Set the Time Zone: Pacific, Mountain, Central, Eastern.
Sleep Timer	Set the Sleep Timer (in minutes): 30, 60, 90, 120 or OFF.
About	View COBY copyright information.

SETUP MENU

Lock Settings

Use the Navigation Keypad to highlight the desired Lock setting and press **OK** to confirm. A password prompt will appear; you must enter the correct password to access the Lock Settings.

- Use the Numeric Keypad to enter the 4-digit password. Upon entering the correct password, the Lock Setting options will appear.
- **The initial password is “0000”.** After entering the password, you may use the “Change PIN” setting to change the password.



*Resetting the unit to its default settings will not reset the password. **DO NOT FORGET THE PASSWORD;** write the password down and store it somewhere safe.*

Lock Setting	Description
MPAA	Movie broadcasts that have been classified with a higher rating will be blocked. <ul style="list-style-type: none">• NA: no restrictions (lowest rating)• G: General Audience• PG: Parental Guidance suggested• PG-13: Not intended for ages under 13• R: Restricted• NC-17: Not intended for ages under 17• X: For adults only (highest rating).
CanEnglish	Canadian English broadcasts that have been classified with a higher rating will be blocked. NA, C, C8+, G, PG, 14+, 18+. <ul style="list-style-type: none">• NA is the lowest rating, 18+ is the highest rating.
CanFrench	Canadian French broadcasts that have been classified with a higher rating will be blocked. NA, G, 8ANS+, 13ANS+, 16ANS+, 18ANS+. <ul style="list-style-type: none">• NA is the lowest rating, 18ANS+ is the highest rating.

SETUP MENU

Lock Setting	Description
TV Guidelines	TV broadcasts that have been classified with a higher rating will be blocked. <ul style="list-style-type: none">• None/Off: no restrictions (lowest rating)• TV-Y: All children• TV-Y7: For children aged 7 and above• TV-G: General Audience• TV-PG: Parental Guidance suggested• TV-14: Not intended for ages under 14• TV-MA: For mature audiences only (highest rating).
Change PIN	Enter the old password, the new password, and then the new password again to verify and change the Parental Settings password. Restoring the player's default settings will not reset the password. DO NOT FORGET THE PASSWORD; this password cannot be reset.
V-Chip Ctrl	Turn the Lock features on or off.

SPECIFICATIONS

TV System	ATSC
Channel Coverage	VHF-L: 57MHz ~ 129MHz VHF-H: 135MHz ~ 363 MHz UHF: 369 ~ 803MHz
Video Output	Component Video S-Video Composite Video
Audio Output	Coaxial Digital Audio RCA 2-Channel Stereo Audio
Operating Temperature	50°F – 104°F
Power	AC 90-260V 50/60Hz 10W (max)
Unit Dimensions	123 x 78 x 28 mm
Weight	177g

Specifications and manual are subject to change without notice.

TROUBLESHOOTING

If you have a problem with this player, please read the troubleshooting guide below and check our website at www.cobyusa.com for Frequently Asked Questions (FAQs) and firmware updates. If these resources do not resolve the problem, please contact Technical Support.

COBY Electronics Technical Support

56-65 Rust Street
Maspeth, NY 11378

Hours: 8:00 AM–11:00 PM EST, seven days a week.

Email: techsupport@cobyusa.com

Phone: 718-416-3197, 800-681-2629, or 800-727-3592

Web: www.cobyusa.com

There is no power to the device.

- Ensure that the AC adapter cord is securely connected to the player and the proper wall outlet.
- Ensure that the Power Switch on the main unit has been set to the ON position.

There is no picture.

- Try another TV channel
- Check if the system connections are proper and secure.
- Check if the connection cables are damaged.

The picture color is distorted.

- Reset the color system of the unit.
- Check if the system has been properly connected.
- Check if the AV video signal input cable is connected properly.

TROUBLESHOOTING

The picture is not full-screen.

- Change the aspect ratio setting (Picture Size) of the unit from the Setup menu.
- Change the aspect ratio setting of your TV.

There is no sound or distorted sound.

- Increase the volume.
- Check if the sound system has been properly set.
- Check if the AV audio signal input cable has been connected properly.

The picture and sound are distorted.

- Check if the system has been properly connected.
- Adjust the position of the antenna.

The remote control doesn't work.

- Ensure that the Power Switch has been physically set to the ON position.
- Ensure that there are no obstacles between the remote and the player.
- Point the remote at the remote sensor on the main unit.
- Ensure that the batteries in the remote retain a charge and have been installed correctly.
- Try replacing the remote's batteries.

The unit has malfunctioned.

- Unplug the unit. After 30 minutes, plug in and power on the unit—the restore function should reset the player.

COBY Electronics Corp.

56-65 Rust Street
Maspeth, NY 11378

www.cobyusa.com
www.ecoby.com